

20

100-200 AMP
METER MAINS

Meter Mains

100-200 Amps | 4 Terminals | Ringless | 120/240 VAC



U3499-XL-100



U3989-XL-100




U3990-XL-150




U3798-O-200




U5757-O-200

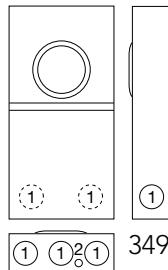


3499

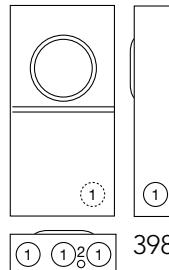


3989

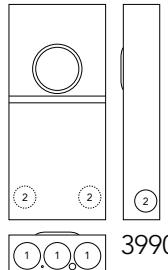

3990

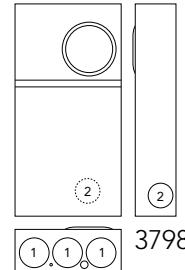

3798

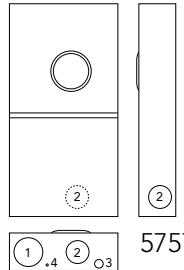

5757

4 Terminals | Ringless | Meter Mains | 103W

Catalog Number	Service	Amps	Hub	Connectors CU/AL		Bypass	Dimensions			Knockouts			
				Line	Load		D"	W"	H"	1	2	3	4
U3499-XL	OH/UG	100	C.P.	#6-2/0	#6-1/0	None	3 $\frac{1}{4}$	11	22	2	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	—	—
U3499-XL-100	OH/UG	100	C.P.	#6-2/0	#6-1/0	None	3 $\frac{1}{4}$	11	22	2	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	—	—
U3989-XL	OH/UG	100	C.P.	#6-2/0	#6-1/0	None	3 $\frac{1}{4}$	11	22	2	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	—	—
U3989-XL-100	OH/UG	100	C.P.	#6-2/0	#6-1/0	None	3 $\frac{1}{4}$	11	22	2	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	—	—
U3990-XL-150	OH/UG	150	C.P.	#2-350	#1/0-300	None	4 $\frac{1}{8}$	13	29	3	2 $\frac{1}{2}$	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	$\frac{1}{4}$
U3990-XL-200	OH/UG	200	C.P.	#2-350	#1/0-300	None	4 $\frac{1}{8}$	13	29	3	2 $\frac{1}{2}$	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	$\frac{1}{4}$
U3798-O-200	UG	200	Blank	#2-350	#1/0-300	None	4 $\frac{1}{8}$	13	25 $\frac{13}{16}$	3	2 $\frac{1}{2}$	1 $\frac{1}{4}$, 1 $\frac{1}{2}$	$\frac{1}{4}$

Notes

- Hubs:** For proper hub selection, see the hub suffix chart on the Accessories page.
- Circuit breakers:** The **U3499-XL-100** has a factory-installed 100 Amps breaker. The **U3990-XL-150** and **U3990-XL-200** have factory installed Milbank **UQFB-(AMP)-X1** breakers. The **U3798-O-200** has a factory-installed UQFB-200-X1 breaker. The **U3989-XL-100** is supplied with a 100 Amps plug-in style breaker and has provisions for two 1-pole breakers.
- Fifth terminal:** For field-installed fifth terminal for **U3499** and **U3989**, order **5T8K2**. For **U3990** and **U3798**, order **K5T**.



Please consult serving utility for their requirements prior to ordering or installing, as specifications and approvals vary by utility, and may require local electrical inspector approval. All installations must be installed by a licensed electrician and must comply with all national and local codes, laws and regulations. Milbank reserves the right to make changes in specifications and features shown without notice or obligation.